



REAR PANEL

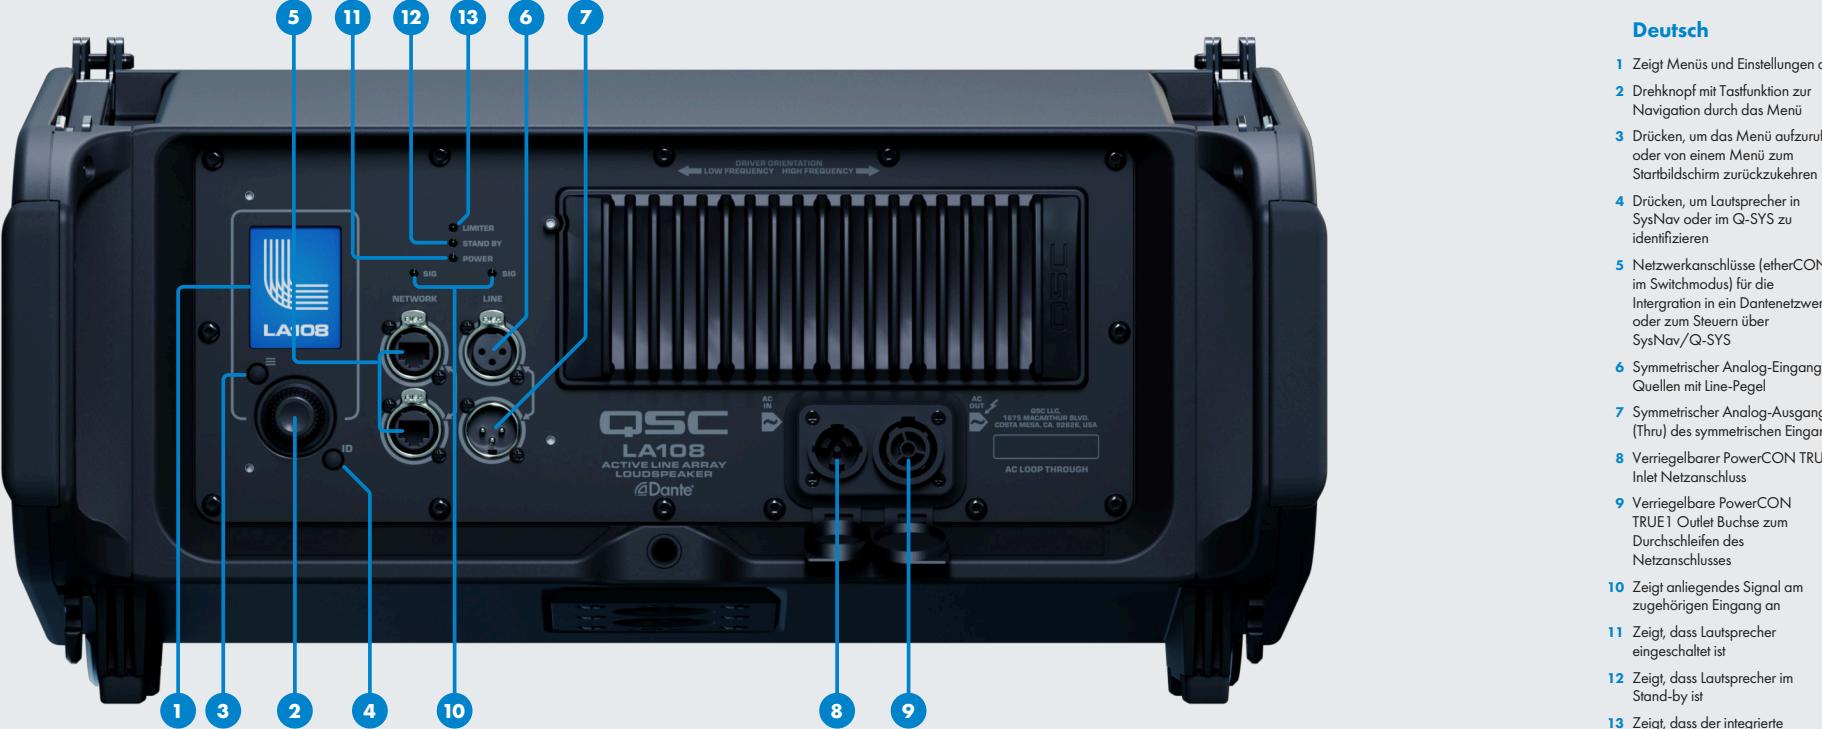

- 1 Displays Menus and Settings
- 2 Rotate to adjust gain, select values, and press for enter
- 3 Push to enter the Menu, or return to Home Screen from Menu
- 4 Push to ID loudspeaker in SysNav or Q-SYS Ecosystem
- 5 Dual-switch Ethercon connections to SysNav and/or Dante®-enabled system
- 6 Balanced analog input connection for line level sources
- 7 Parallel (Thru) balanced analog output connection of the balanced input
- 8 PowerCON TRUE1 Inlet
- 9 PowerCON TRUE1 Outlet
- 10 Indicating Signal is present on the associated input
- 11 Loudspeaker is powered on
- 12 Loudspeaker is in standby
- 13 Loudspeaker DSP is limiting

FLOOR INSTALLATION


Dual pole cup mounts – standard 0 and 7.5 degree down-tilt

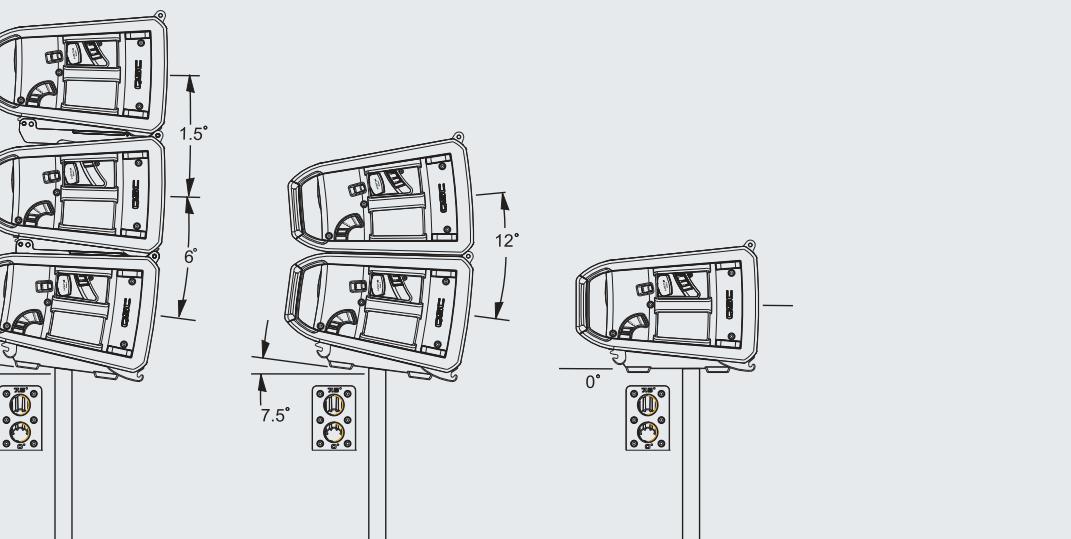

FLOOR INSTALLATION

Refer to User Manual for deployment safety details for:

- Ground-stacking – using QSC adapter accessories
- Pole mounting – using QSC SP-26 or SP-36 accessory poles
- Stand mounting – using a loudspeaker stand with 45 kg / 100 lb safety rating

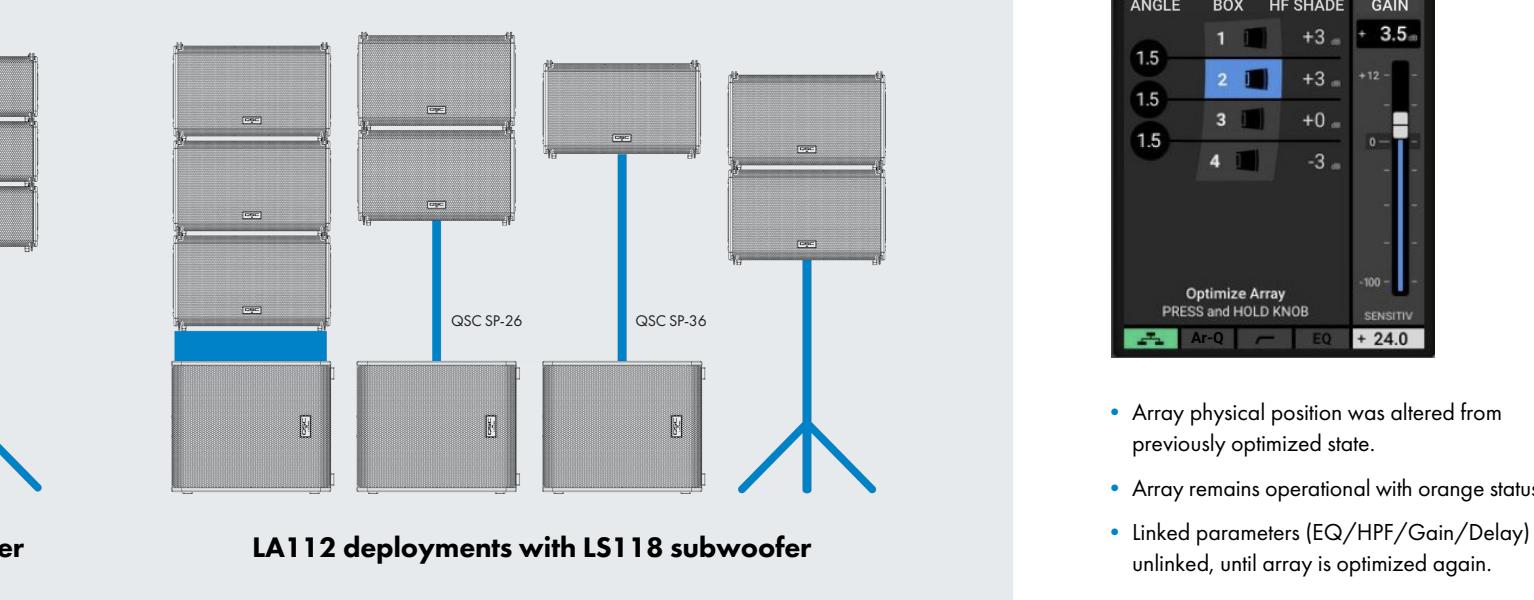

HOME SCREEN

