

How to use USB and SD ?

First of all, dial the switch to ON, insert U disc or SD card, it can play songs in automatic as long as it has MP3 format files inside.

*you can press different buttons as you want:

PREV. : press one time, back to the last song,

NEXT: press one time, go to the next song,

*PLAY / PAUSE: press one time , to play or pause the playing.

How to connect Bluetooth?

Connecting Bluetooth match: Searching the Bluetooth device on your cell phone or laptop after megaphone power on. The megaphone's LED indicator will then blink signaling it is ready to be paired. The LED light on when the bluetooth connected success, the password is 000000 if necessary.

Attention here:

a: Please make sure your bluetooth device is open before connecting it.

b: Not all the bluetooth device is the same, so read your bluetooth device (Such as Iphone, ipad, laptop ect.)instruction carefully before connecting.

c: If the bluetooth is not in the match state, please reboot megaphone.

d: Please set the sound of device to bluetooth output mode(press M key into the mode)when the bluetooth match success, or there is not sound from megaphone.

*you can press different buttons as you want:

PREV. : press one time, back to the last song,

NEXT: press one time, go to the next song,

*PLAY / PAUSE: press one time, to play or pause the playing.

How to Charge Lithium battery ?

*Connect charge plug to AC 110V

*In order to keep long life, we suggest that the battery be charged for 12hours the first time it runs out. During charging, the LED light turns red, when the LED turn green, then the battery is fully charged.

PRECAUTIONS

Ensure correct polarity of Cells. Insert the batteries in the correct direction by aligning the (-) marks on the batteries with the spring in the back cover.

AVAMPLI**VOX**[®]
SOUND SYSTEMS



S602MBT

MEGAPHONE

- All ABS Body, sturdy yet light weight
- Built –in Music& Microphone
- Clear sound, long range & efficient design
- Conveniently located Volume Control & Switch
- 10 Seconds Voice Recording Function

SPECIFICATIONS

Megaphone Dimensions: 9" X 13 3/4"

Power Output: 50 Watts MAX

Audio Projection Range: Up to 1,760 Yards/One Mile


MAIN MATERIAL: ABS

POWER REQUIREMENT: 1.5V (SIZE C) x 8 or Battery Pack (Included)

FUNCTION: SPEAK, SIREN, 10S RECORD / USB / SD plugs / Bluetooth

Parts and Functions

1. Back cover: Holds the battery compartment
2. Open Button
3. Battery compartment: Holds 8 "C" cell batteies (optional)
4. Speaker horn
5. Signal switch: Switches the megaphone to the Siren, whistle OFF
6. Press-to -TALK switch: Press this switch for announcing when carrying the megaphone
7. Handle for Portability
8. Microphone to speak (with siren/record/play/function)
9. Mic fixing hanger: Hangs the microphone
10. AUX
11. USB/SD PLUG
12. Music button
13. PLAY / PAUSE: press one time, to play or pause the playing.
14. PREV.: press one time, back to the last song, hold on for decrease the volume.
15. NEXT: press one time, go to the next song, hold on for increase the volume.

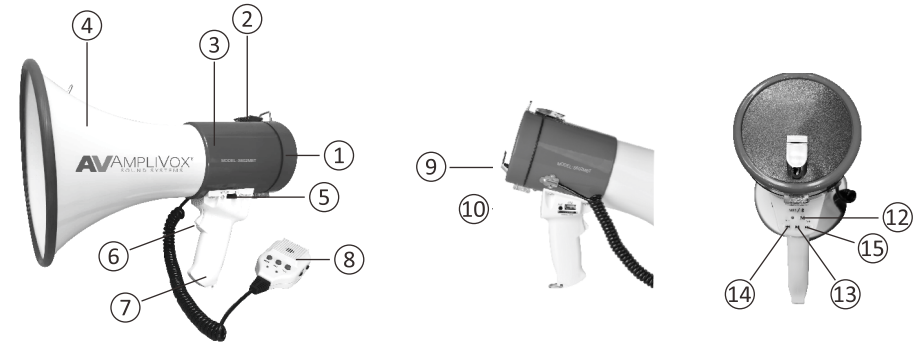

OPERATION

Open the Back Cover by pressing the Open Button.

Insert 8 x "C" Cells then close the back cover until it locks. Or you can insert the Rechargeable Battery Pack, Be sure to insert the black and double-orifice into the jack in the battery compartment and secure battery cover. Now your megaphone is ready for action.

To activate the megaphone, press the ON/OFF Button on the Back Cover.

When using the megaphone, place your lips as close as possible to the microphone. Adjust the Volume Control to the desired level without causing any howling or feedback. Press Music button to activate music. To switch off the music, press the same button again, or press the ON/OFF button.

Adjust the volume control to the min. before recording. Press the REC button, the indicator light will be on. Now your megaphone is ready for recording. The longest record time is about 10 secs. Press the REC button after finishing recording. Press the PLAY Button to activate the recorded message circularly.