Manual nstruction

impression[®]



from software version: V1.16



support@glp.de www.glp.de



Notes:	




Table of contents

1	υes	criptio	n ot Device	4
	1.1	Safety	/ Instructions	5
2	Pre	paratio	n and Installation	6
	2.1		nformation	
	2.2	Mount	ting	7
		2.2.1	Operating on the Floor (Upright)	8
		2.2.2	Mounting in hanging position	8
		2.2.3	Mounting in sideways Position	g
	2.3	Securi	ing the Fixture	10
	2.4	Conne	ections	10
		2.4.1	Power Supply	10
		2.4.2	NEUTRIK® powerCON	10
		2.4.3	DMX	11
3	The	Menu l	Field	11
4	DMX	X Chan	nel Selection (DMX Protocol)	14
	4.1		al-Mode 18 DMX channels	
	4.2	Comp	ress-Mode 14 DMX channels	16
	4.3	High F	Resolution (Extended) -Mode 19 DMX Channels	17
5	Mai	ntainin	g and Cleaning the IMPRESSION X4S	19
	5.1	Safety	regulations	19
	5.2	Mainte	enance and Interval (rule-of-thumb)	19
	5.3	Chang	ging the Fuse	20
6	Tec	hnical \$	Specifications	21
7	Dim	ension	S	22
8	Inde	ΣY		23





1 Description of Device

- Moving head (actively and passively cooled)
- 2. Arm of device
- 3. LCD-Display/Menu (data entry)
- 4. Base with various connectors, air in/outlets and mounting system
- 5. Fuse holder (2x)

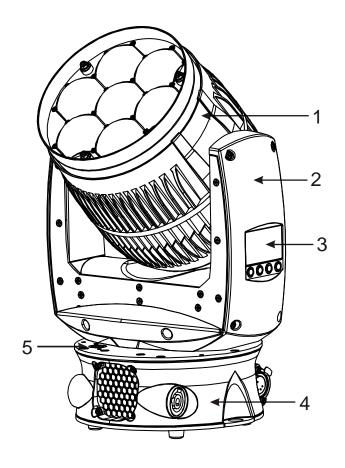

Base sideview:

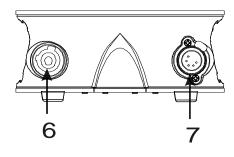

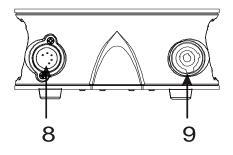

- 6. Mains Out (powerCON)
- 7. DMX- Output (5-pin)
- 8. DMX- Input (5-pin)
- 9. Mains In (powerCON)



1.1 Safety Instructions



The **IMPRESSION X4S** is a High-Tech Product. To guarantee a smooth operation, it is necessary to respect the following rules.

The manufacturer of this device will not take responsibility for damages through any disregard of the information provided in this manual. Warranty claims also will be voided in the case that the fixture housing is opened.

- 1. Before powering on the fixture, make sure that the fixtures fans and air inlets are clean and not blocked.
- 2. Ensure that the fixture head can rotate unhindered throughout its complete range of pan and tilt movement. A safety distance of at least 0.5 m must be maintained between the fixture and any easily inflammable material (e.g. decoration material).
- 3. <u>Attention!</u> Don't touch the fixture during the operation. This can cause injuries and/or damages.
- 4. The fixture doesn't contain any user serviceable parts. Opening the fixture will void all warranties.
- It is necessary to wait at least 15 minutes after disconnecting the mains power before handling the fixture.. Pay attention to possible hot parts of the fixture.
 -- Danger of BURNING --
- 6. Never look directly into the beam of light or into one of the LEDs.

 Never use optical apertures to observe the beam of light. LED Class 2M.

 You'll risk serious injury of your eyes and in particular of your retina.



Attention: LED Class 2M can cause injuries of your eyes even without optical instruments in front of them or within a distance of less than 0.5m and short exposure time.

Hence: Avoid direct radiation into your eyes!

- 7. To ensure safe operation, follow also the Installation guide described in chapter 2. Operating the IMPRESSION X4S without suitable safety aids like Safety cables or clamps/hooks can increase the risk of an accident and must be avoided.
- Repair, maintenance, and installation work shall be done by qualified or GLP certified staff only. You need to pay attention to the common rules of technology that are not explicitly mentioned in this manual.
- Use only original GLP spare parts. Any structural modification of the system will terminate all warranty claims.
- 10. Please keep this instruction manual for future reference.



2 Preparation and Installation

2.1 Safety information

The **IMPRESSION X4S** fixture from GLP is fitted with a number of plano-convex lenses in a highly efficient collimator cluster. This type of lens can act as a strong magnifying glass.


If the rays from a strong light source (such as the sun or another lighting fixture) are directed towards the front of any of these fixtures, then internal damage may occur. In a worst case scenario with a high power light source this can happen very quickly, damaging the fixture internally, potentially melting components or causing an internal fire within seconds.

In order to avoid these possible problems please adhere to the following requirements:

- Do not expose the front of a fixture to direct sunlight or any other strong light sources.
- For outdoor applications during daylight make sure that the front face of any fixture is either shielded or points away from the sun, even when fixtures are not in use.
- Do not modify the front glass or lenses of any fixture.

These requirements have to be followed regardless of whether a fixture is powered on or off as the magnifying effect is an optical effect and therefore independent from the (electrical) state of the fixture.

Especially when working with high powered **beam-lights**; extreme caution and observance of these safety instructions is mandatory.

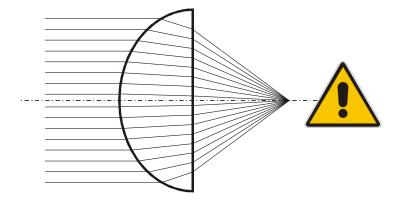


Should you have any questions about the operation of your fixture then please contact your local GLP office, or their authorized distributor, a list of which can be found at http://www.glp.de.



2.2 Mounting

The **IMPRESSION X4S** is fully operational whether it hangs or is mounted to the wall. It can also be operated while standing on the floor. Keep a safety distance of min. 0.5 m towards any easily inflammable materials (decoration etc.).

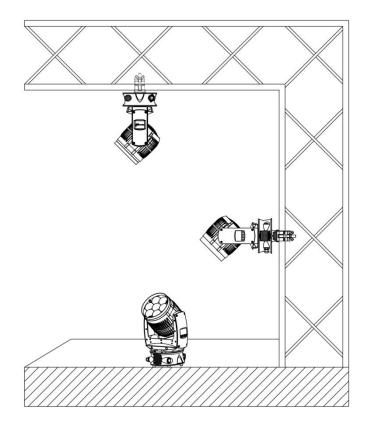




Pay attention to the regulations of: BGV C1 (former VBG 70), DIN VDE 0711-217 and BGI 810-3.

The installation shall be done by qualified staff only.

For the various mounting positions of the **IMPRESSION X4S** (standing on the floor, sideways or hanging) different connectors are available. Through this a safe and firm installation is assured. You'll find dedicated M10 threads on the bottom side of the fixture which should be used. In addition the top of the base is marked with a **FRONT** arrow allowing consistent orientation during installation.




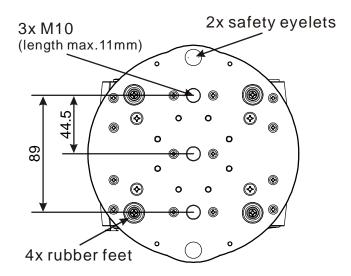

Fixture from below

2.2.1 Operating on the Floor (Upright)

The **IMPRESSION X4S** is fitted with 4x solid rubber feet which allows a stable standing of the fixture. An additional securing is usually not required. Please pay attention to an even and gripping surface.

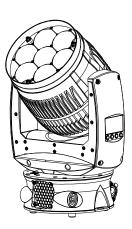


2.2.2 Mounting in hanging position

To operate the **IMPRESSION X4S** in a hanging position please use a half-coupler (clamp). This can be mounted directly to the bottom side of the fixture. It should be attached centrically with a M10 mm thread bolt (max. length 11mm).

<u>Attention:</u> Never use a longer bolt as this may damage the interior of the fixture.



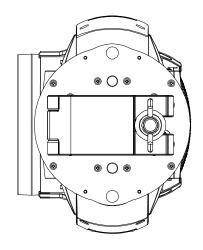





2.2.3 Mounting in sideways Position

To operate the **IMPRESSION X4S** in a sideways position please use two half-couplers (clamps) attached to the bottom side of the base. They should be attached with M10 mm thread bolts (max. length 11mm).

This technique is necessary to cope with the torque which accrues in this mounting position. Never use the "Mounting in hanging position" technique described above to fasten the fixture in the sideways position. A safe and sound installation cannot be assured in this way. In addition this can damage the fixture base.

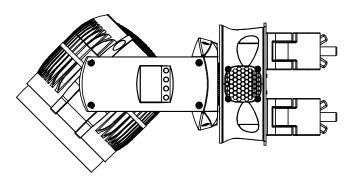

2x half-couplers fan outlet <u>must</u> be facing sideways

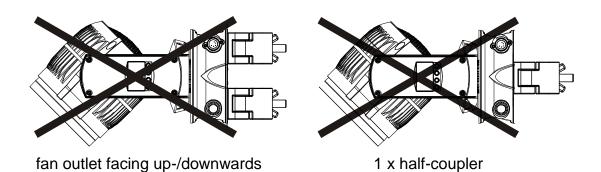

Warning: Risk of fire and electric shock



2.3 Securing the Fixture

Regardless of the mounting method of the **IMPRESSION X4S** you'll have to use a stipulated safety wire. Attach the safety wire through one of the two holes provided on the base of the fixture and connect it to the primary support structure. Pay attention to a safe and proper fastening. The safety cable must comply with BGI 810-3 (EN 60598-2-17 Section 17.6.6) and be capable of bearing a static suspended load that is ten times the weight of the fixture and all installed accessories.

2.4 Connections

2.4.1 Power Supply

~100-240 Volt AC, 50-60 Hz, powerCON AC connector

Connected load 200 VA (W) <=> T2A (2x micro-fuse 5x20mm)

Please also see the printing on the case!

Disconnect from the mains supply for changing the fuse and use only the above described micro-fuse type.

2.4.2 NEUTRIK® powerCON

The **IMPRESSION X4S** is fitted with NEUTRIK[®] powerCON locking 3 conductor AC connectors. Up to max. 30 **impression X4S** can be linked via the power outlets staying within the power limits of the 20A of the connectors.

Note: Regional regulations and limits might be lower and differ from that.




Picture: Courtesy of NEUTRIK® AG

Please also note that there are two different generations of NEUTRIK® powerCON connectors (Type NAC3FCA). Due to different mechanical dimensions, only the newer version of these two can be used for **impression X4S** fixtures.

You can identify the correct version by the imprint on the side and the NEUTRIK[®] Logo on the lock latch.





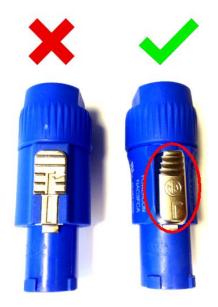

2.4.3 DMX


USITT DMX-512 Standard input/output in 5-pin connectors.

Pin 1 = [Ground] / Pin 2 = [-] / Pin 3 = [+] / Pin 4 & 5 N.C.

The DMX- Addressing starts at the DMX- Address [001].

3 The Menu Field

You'll find the control board on the side part of the arm. It allows you to make all necessary adjustments of the **IMPRESSION X4S.** With the **Mode-**key you get into the main menu. Afterwards you can navigate through the menu with the **Up/Down-**keys. Push the **Enter-**key to get in the next menu level or to confirm your settings. Make them and set functions **ON/OFF** with the **Up/Down-**keys. Confirm and save it with the **Enter-**key (the display shows **OK**). Push the **Mode-**key to cancel the entry and go back to the main menu.

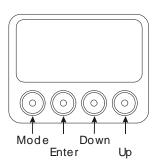

To lock or unlock the keys of the menu field press Mode+Enter+Up simultaneously.

← MODE - ENTER →

个	Level1	Level 2	Level 3	Level 4	Remark
. UP	DMX Start Address 001				Set the DMX start address
Ž	Special	Manual DMX			Manual control of all fixture functions
≥			Pan		Manual control for Pan (X-movement)
7 00			Pattern Byte 1		Manual control for Pattern Byte 1 LED 1 - 7
V			Pattern		Manual control for Pattern channel / bank
			Zoom		Manual control for Zoom



	Speed Movements		Manual control for Pan/Tilt movements
	Pan/Tilt Movements		Manual control for Pan/Tilt movements
	Special		Manual control for Special functions
	White		•
	Temperature		Manual control for Color temperature
	Dimmer		Manual control for Dimmer
	Shutter		Manual control for Shutter
	White		Manual control for White
	Blue Green		Manual control for blue Manual control for green
	Red		Manual control for red
	Color Wheel		Manual control for the color wheel
	Tilt		Manual control for Tilt (Y-movement)
Adjust			
	Key code		Use the code for entering the calibration menu (for authorized persons only)
	Display		Adjustment for the Display contrast
	Contrast PWM -		
	Frequ. Adj. Max Zoom		Changes PMW frequency
	adjust		Calibration of Zoom-offset
	Pan Offset		Calibration for Pan-offset
	Tilt Offset LED		Calibration for Tilt-offset
	100mA/1A adjust		Adjust dimming of the LEDs
	LED adjust		
		White adjust red	Adjust intensity for red channel
		White adjust blue	Adjust intensity for blue channel
		White adjust green	Adjust intensity for green channel
	Clear EEPROM		Erase EEPROM memory
	BL- Diagnose		Diagnose of Boot-loader
T	Diagnose		Diagnose fixture functions
Temperature Head			Read out head temperature
Default full feature			Reset all settings to factory defaults
Display Black out			Auto switch-off display illumination after 10 seconds
DMX hold		1	Holds last DMX signal in case of signal loss
DMX Image	1 -		
	Set image if DMX off		Activates a stored scene if DMX is off
	Save image in memory		Stores the scene currently sent to the unit
Set dimming mode			Linear Dimming / Extr. soft dimming / Soft dimming
DMX input Monitor			Indicates the presently received DMX signal per DMX channel
	Pan		Instantaneous value for Pan
	Pattern		Instantaneous value for Pattern Byte 1
	Byte 1	1	



Pattern Zoom Speed Movements Pan/Tilt Movements Special White Temperature Dimmer Shutter White Blue Green Red Color Wheel Tilt

Self test program

Live time

Set DMX Mode

Compressed
Mode
Normal
Mode
High-Res.
Mode

Position feedback Reverse Pan Reverse Tilt Reset

Instantaneous value for Pattern channel / bank Instantaneous value for Zoom Speed adjustment for Pan/Tilt movements → see item below Instantaneous value for Pan/Tilt movements Instantaneous value for Special Adjustment of the color temperature for WHITE Instantaneous value for Dimmer Instantaneous value for Shutter Instantaneous value for White Instantaneous value for Blue Instantaneous value for Green Instantaneous value for Red Instantaneous value for Color Mixing unit Instantaneous value for Tilt Initiates a self-test program On-time of fixture Select the desired DMX Mode Fixture works in "Compressed" mode → see also section 4 unterhalb Fixture works in "Normal" mode → see also section 4 unterhalb Fixture works in "High Resolution" mode → see also section 4 unterhalb Switch automatic position feedback ON/OFF Invert Pan movements: ON/OFF Invert Tilt movements: ON/OFF RESET and new calibration for all functions



4 DMX Channel Selection (DMX Protocol)

4.1 Normal-Mode 18 DMX channels

2) PAN-fine	Channel	Function			Time and Value	DMX	HEX	%
2) PAN-fine 0.255 00.FF 0.	1) PAN-					0255	00FF	0100
3) Tilt-coarse 0255 00.FF 0.	coarse							
Colors adjustable via RGBW	2) PAN-fine				0255	00FF	0100	
A) Tilt-fine	1 -					0255	00FF	0100
Color (fixed)						0.255	00 55	0.100
Color 01 - Red 1		Coloro odiuo	toble vie DC	·D///				0100
Color 02 - Amber 1		Colors 01 Da	dable via KG	DVV				35.5
Color 03 - Warm Yellow 32.39 20.27 13.	(lixea)	Color 02 Ar	3 0 1)	_				68.5
Color 04 - Yellow 1) 3239 2027 13.				1)				912.5
Color 05 - Green 1								1315.5
Color 06 - Turquoise 3 30.37 9 9 Color 07 - Cyan 56.63 30.37 9 9 Color 07 - Cyan 56.63 38.38 22 22 Color 08 - Blue 1 64.71 40.47 25 Color 09 - Lavender 7 72.79 48.4F 28 Color 10 - Malve (Mauve) 80.87 50.57 31 Color 11 - Magenta 1 88.95 58.5F 35 Color 12 - Pink 96.103 60.67 38 89.5 58.5F 35 Color 12 - Pink 96.103 60.67 38 White - CTO 3200K 104.111 68.6F 41 White 5600K 112.119 70.77 44 White - CTB 7200K 120.127 78.7F 47 47 47 47 48 48 48 48								1618.5
Color 07 - Cyan 1)								1921.5
Color 08 - Blue 1)		Color 07 - Cv	van ¹⁾					2224.5
Color 09 - Lavender 1		Color 08 - Bl	ue ¹⁾					2527.5
Color 10 - Malve (Mauve) 3 80.87 50.57 31.								2830.5
Color 11 - Magenta		Color 10 - Ma	alve (Mauve) 1)				3134.5
Color 12 - Pink 1) 96103 6067 38.		Color 11 - Ma	agenta 1)					3537.5
White - CTO		Color 12 - Pi	nk ¹⁾					3840.5
White					3200K			4143.5
White - CTB								4446.5
Rainbow Effect Stop 20								4749.5
Rainbow Effect 3 Slow - fast 129223 81DF 51		Rainbow Effe	ect Stop 2)			_		50
Random colors Slow - fast 224255 E0FF 89		Rainbow Effe	ect 3)		slow - fast	129223	81DF	5188
7) Green		Random colo	ors			224255	E0FF	89100
B) Blue	6) Red	Color mixing	system - Re	ed	0 - 100%	0255	00FF	0100
Blue	7) Green				0 - 100%	0255		0100
Shutter Color mixing system - White O - 100% O255 O0FF O.	8) Blue		•		0 - 100%	0255	00FF	0100
Shutter closed Shutter closed Shutter pulse random Slow – fast 1647 102F 6								0100
Shutter pulse random								05.5
Up-dimming then Shutter closing (random patterns) slow – fast 4879 304F 19 Shutter open then down-dimming (random patterns) slow – fast 80111 506F 32 Up-dimming then down-dimming (random patterns) slow – fast 112143 708F 44 Strobe effect pause 5s - 0.1s 160199 A0C7 63 Strobe effect slow - fast 1 Hz - 10 Hz 200239 C8EF 78 Shutter open 240255 F0FF 95 11) Dimmer Dimmer 0 - 100% 0255 0FF 0. 12) CTO No CTO 07 007 0.0 07 007 0. 13) Special Pattern Block 1 → channel 17 03 0003 0 0 14) Movement No macros 0 0 0 0 Movement Size Phase Use "Speed" to adjust 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101	,				slow – fast			618.5
(random patterns) Slow - fast 4879 304F 18 Shutter open then down-dimming (random patterns) Up-dimming then down-dimming (random patterns) Slow - fast 112143 708F 44 Strobe effect pause 5s - 0.1s 160199 A0C7 63 Strobe effect slow - fast 1 Hz - 10 Hz 200239 C8EF 78 Shutter open 240255 F0FF 95 11) Dimmer Dimmer 0 - 100% 0255 0FF 0. 12) CTO No CTO 07 007 0 Continuous color temperature correction Applicable for ALL colors 8255 08FF 3. 13) Special Pattern Block 1 → channel 17 03 0003				r closing				
(random patterns) Slow – last 80111 506F 32 Up-dimming then down-dimming (random patterns) slow – fast 112143 708F 44 Strobe effect pause 5s - 0.1s 160199 A0C7 63 Strobe effect slow - fast 1 Hz - 10 Hz 200239 C8EF 78 Shutter open 240255 F0.FF 95 11) Dimmer Dimmer 0 - 100% 0255 0FF 0. 12) CTO No CTO 07 007 007 0. Continuous color temperature correction colors 8255 08FF 3. 13) Special Pattern Block 1 → channel 17 03 0003 0 Change PWM frequency 100200 64C8 40 RESET 250255 FAFF 98 14) Movement Movement Size Phase Use "Speed" to adjust 0101 0101 0101 0101 0101 0101 0101 0101 0101 0101 010		(random patt	terns)		SIOW - TAST	4879	304F	1931
Up-dimming then down-dimming (random patterns) Slow – fast 112143 708F 44				dimming	slow - fast	80111	506F	3243
Strobe effect pause 5s - 0.1s 160199 A0C7 63		Up-dimming	then down-d	dimming	slow – fast	112 143	70 8F	4456
Strobe effect slow - fast 1 Hz - 10 Hz 200239 C8EF 78								
Shutter open 240255 F0FF 95								6377
11) Dimmer Dimmer 0 - 100% 0255 0FF 0. 12) CTO No CTO 07 003 0003 0003 0003 0003 0003 0003 0003 0003 0003 0003 0003 0003 0003 0004 0004 0002 0002 0002 0002 0002 0002					1 Hz - 10 Hz			7894
No CTO 07 003 0003	443.51		l		0 40004			95100
Continuous color temperature correction Applicable for ALL colors 8255 08FF 3. 13) Special Pattern Block 1 → channel 17 03 0003 003 0003 000 0200 64C8 4040					0 - 100%			0100
correction colors 8255 08FF 3. 13) Special Pattern Block 1 → channel 17 03 0003 0 Change PWM frequency 100200 64C8 40 RESET 250255 FAFF 98 14) Movement No macros 0 00 ment Movement Size Phase Use "Speed" to adjust PAN 1 0° 0101 0101 0101	12) CTO				A 11	07	007	02.5
13) Special Pattern Block 1 → channel 17 03 0003 0 Change PWM frequency 100200 64C8 40 RESET 250255 FAFF 98 14) Movement No macros 0 0 ment Movement Size Phase Use "Speed" to adjust PAN 1 0° 0101			color temper	ature		8255	08FF	3100
Change PWM frequency 100200 64C8 40	13) Special		k 1 → chann	el 17	33.3.3	0.3	00 03	01
RESET 250255 FAFF 98								4078
14) Movement ment macros No macros 0 00 PAN 1 0° Use "Speed" to adjust 0101 0101 0101 0101			oquorioy					98100
ment macrosMovementSizePhaseUse "Speed" to adjustPAN10°01010101	14) Move-						0	
macros PAN 1 0° 0101 0101 (_		Size	Phase	Use "Speed" to adjust	 		
			_			0101	0101	0.5
			1	90°		0203	0203	1.0
			1					1.7



Channel	Function	1		Time and Value	DMX	HEX	%
		1	270°		0607	0607	2.5
	PAN	2	0°		0809	0809	3.3
		2	90°		1011	0A0B	4.1
		2	180°		1213	0C0D	4.9
		2	270°		1415	0E0F	5.7
	PAN	3	0°		1617	1111	6.5
		3	90°		1819	1213	7.3
		3	180°		2021	1415	8.0
		3	270°		2223	1617	8.8
	PAN	4	0°		2425	1819	9.6
		4	90°		2627	1A1B	10.4
		4	180°		2829	1C1D	11.2
		4	270°		3031	1E1F	12
	TILT		size / phase		3263	203F	1325
	PAN / TIL		size / phase		6495	405F	2637
		T (inverse)		see PAN	96127	607F	3850
	Circle			see PAN	128159	809F	5162
	Circle (inv		size / phase		160191	A0BF	6375
	Lying eigh		size / phase		192223	C0DF	7687
		movement	size / phase	see PAN	224255	E0FF	88100
15) Speed	Pan/Tilt m	novement spee	ed from		01	0001	005
Pan/Tilt	Pan/Tilt, s	slow – fast					
	Use this of	channel also fo	r the speed of		02255	02FF	1100
	the move	ments (channe	l 14).				
16) Zoom	Wide - na	rrow (spot)			0255	00FF	0100
17) Pattern	No patter	n			02	0002	01
		ed patterns			03253	03FD	299
	Activates	direct access t	o LED Pattern		254255	FEFF	100
18) Pattern Byte 1	Direct acc	cess to Pattern	of LED 17		0255	00FF	0100



4.2 Compress-Mode 14 DMX channels

Channel	Function	Time and Value	DMX	HEX	%
1) PAN-			0255	00FF	0100
coarse					
2) PAN-fine			0255	00FF	0100
3) Tilt- coarse			0255	00FF	0100
4) Tilt-fine			0255	00FF	0100
5) Color	Colors adjustable via RGBW		07	0007	02.5
(fixed)	Color 01 - Red 1)		815	080F	35.5
	Color 02 - Amber 1)		1623	1017	68.5
	Color 03 - Warm Yellow 1)		2431	181F	912.5
	Color 04 - Yellow 1)		3239	2027	1315.5
	Color 05 - Green 1)		4047	282F	1618.5
	Color 06 - Turquoise 1)		4855	3037	1921.5
	Color 07 - Cyan 1) Color 08 - Blue 1)		5663	383F	2224.5
			6471	4047	2527.5
	Color 10 - Malvo (Mauvo) 1)		7279	484F	2830.5
	Color to - Marve (Mauve)		8087	5057	3134.5
	Color 11 - Magenta 1) Color 12 - Pink 1)		8895 96103	585F	3537.5
	White - CTO	Color tomporatura	104111	6067 686F	3840.5 4143.5
		Color temperature 3200K			
	White	Color temperature 5600K	112119	7077	4446.5
	White - CTB	Color temperature 7200K	120127	787F	4749.5
	Rainbow Effect Stop 2)		128	80	50
	Rainbow Effect 3)	slow - fast	129223	81DF	5188
	Rainbow Effect, random colors	slow - fast	224.255	E0FF	89100
6) Red	Color mixing system - Red	0 - 100%	0255	00FF	0100
7) Green	Color mixing system - Green	0 - 100%	0255	00FF	0100
8) Blue	Color mixing system - Blue	0 - 100%	0255	00FF	0100
9) White	Color mixing system - White	0 - 100%	0255	00FF	0100
10) Shutter	Shutter closed		015	000F	05.5
	Random Pulse effect	slow - fast	1647	102F	618.5
	Up-dimming then Shutter closing (random patterns)	slow - fast	4879	304F	1931.5
	Shutter open then down-dimming (random patterns)	slow - fast	80111	506F	3243
		alow foot	440 440	708F	4456
II	Up-dimming then down-dimming (random patterns)	slow - fast	112143	7001	
	, , ,	5s 1s	144199	A0C7	5777
	(random patterns)				
	(random patterns) Strobe effect pause	5s 1s	144199	A0C7	5777
	(random patterns) Strobe effect pause Strobe effect, slow - fast	5s 1s	144199 200.239	A0C7 C8EF	5777 7894
11) Dimmer	(random patterns) Strobe effect pause Strobe effect, slow - fast Shutter open	5s 1s	144199 200.239 240249	A0C7 C8EF F0F9	5777 7894 9597.5
11) Dimmer 12) Zoom	(random patterns) Strobe effect pause Strobe effect, slow - fast Shutter open Shutter open	5s 1s 1 Hz 10 Hz	144199 200.239 240249 251255	A0C7 C8EF F0F9 FBFF	5777 7894 9597.5 99100
	(random patterns) Strobe effect pause Strobe effect, slow - fast Shutter open Shutter open Dimmer	5s 1s 1 Hz 10 Hz	144199 200.239 240249 251255 0255 0255	A0C7 C8EF F0F9 FBFF 0FF	5777 7894 9597.5 99100 0100
12) Zoom	(random patterns) Strobe effect pause Strobe effect, slow - fast Shutter open Shutter open Dimmer Wide - narrow (spot) Pattern Block 1 → channel 14 Change PWM frequency	5s 1s 1 Hz 10 Hz	144199 200.239 240249 251255 0255	A0C7 C8EF F0F9 FBFF 0FF 00FF 0003 64C8	5777 7894 9597.5 99100 0100
12) Zoom 13) Special	(random patterns) Strobe effect pause Strobe effect, slow - fast Shutter open Shutter open Dimmer Wide - narrow (spot) Pattern Block 1 → channel 14	5s 1s 1 Hz 10 Hz	144199 200.239 240249 251255 0255 0255 03 100200 250255	A0C7 C8EF F0F9 FBFF 0FF 00FF	5777 7894 9597.5 99100 0100 0100
12) Zoom	(random patterns) Strobe effect pause Strobe effect, slow - fast Shutter open Shutter open Dimmer Wide - narrow (spot) Pattern Block 1 → channel 14 Change PWM frequency	5s 1s 1 Hz 10 Hz	144199 200.239 240249 251255 0255 0255 03 100200	A0C7 C8EF F0F9 FBFF 0FF 00FF 0003 64C8	5777 7894 9597.5 99100 0100 0100 01 4078



4.3 High Resolution (Extended) -Mode 19 DMX Channels

Channel	Function	Time and Value	DMX	HEX	%
1) PAN-			0255	00FF	0100
coarse					
2) PAN-fine			0255	00FF	0100
3) Tilt-			0255	00FF	0100
coarse					
4) Tilt-fine			0255	00FF	0100
5) Red- coarse	Color mixing system – Red	0 - 100%	0255	00FF	0100
6) Red- fine	Color mixing system – Red-Low		0255	00FF	0100
7) Green- coarse	Color mixing system – Green	0 - 100%	0255	00FF	0100
8) Green- fine	Color mixing system – Green-Low		0255	00FF	0100
9) Blue- coarse	Color mixing system – Blue	0 - 100%	0255	00FF	0100
10) Blue- fine	Color mixing system – Blue-Low		0255	00FF	0100
11) White- coarse	Color mixing system – White	0 - 100%	0255	00FF	0100
12) White- fine	Color mixing system – White-Low		0255	00FF	0100
13) Shutter	Shutter closed		015	000F	05.5
	Random Pulse effect	slow - fast	1647	102F	618.5
	Up-dimming then Shutter closing (random patterns)	slow - fast	4879	304F	1931.5
	Shutter open then down-dimming (random patterns)	slow - fast	80111	506F	3243
	Up-dimming then down-dimming (random patterns)	slow - fast	112143	708F	4456
	Strobe effect pause	5s - 1s	144199	A0C7	5777
	Strobe effect, slow - fast	1 Hz - 10 Hz	200239	C8EF	7894
	Shutter open		240249	F0F9	9597.5
	Shutter open		251255	FBFF	99100
14) Dimmer- coarse	Dimmer	0 - 100%	0255	0FF	0100
15) Dimmer- fine	Dimmer - Low		0255	0FF	0100
16) Zoom	Spot - Flood		0255	00FF	0100
17) Special	Pattern Block 1 → channel 18		03	0003	01
	Change PWM frequency		100200	64C8	4078
	RESET		250255	FAFF	98100
18) Pattern	No pattern		02	0002	01
	Pre-defined patterns		03253	03FD	299
	Activates direct access to LED Pattern		254255	FEFF	100
19) Pattern Byte 1	Direct access to Pattern of LED 17		0255	00FF	0100

¹⁾ The predefined colors can be used as start-colors for the Rainbow effect. Please select first a desired start-color before you activate the rainbow effect. All **IMPRESSION X4S** will then start from that color and will execute the rainbow effect synchronously. Different **IMPRESSION X4S** can have different start-colors but will still execute the rainbow effect synchronously. If you choose a color different from the ones marked with ¹⁾ in the tables above the rainbow start-color will be red.




Locking and unlocking the Control Panel

Please lock and unlock the control panel by pressing the menu keys MODE & ENTER & UP at the same time.

Additional Display Indications

As a default you'll find the following additional information in the first row of the LCD display: Vxx/xx/xx/x (e.g. V1.16/10/16/NN/NS)

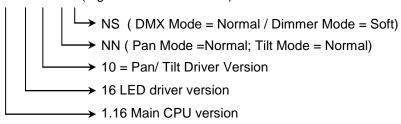

²⁾ Rainbow-effect Stop will pause this function. After resuming the rainbow-effect will be continued from the current color.

³⁾ The Rainbow-effect will run synchronously only if started from one of the predefined colors (see also point ¹⁾ before).



5 Maintaining and Cleaning the IMPRESSION X4S

The **IMPRESSION X4S** is a fixture of very low maintenance. It is only necessary to clean the air inlets and outlets as well as the optical LED lenses from time to time. For safe operation it is absolutely essential that the fixture is kept clean and that dust, dirt and smoke-fluid residues must not build up on, or within the fixture. Otherwise the fixture's light-output will be significantly reduced or damages can occur. Regular cleaning will not only ensure the maximum light-output, but will also allow the fixture to operate reliably throughout its life.

A soft lint-free cloth moistened with any good glass cleaning fluid is recommended, under no circumstances should alcohol or solvents be used!

5.1 Safety regulations

- Pull out the mains power plug!
- Wait min. 15 minutes after disconnecting power to allow the fixture to cool down.

5.2 Maintenance and Interval (rule-of-thumb)

The contamination of the fixture depends on the environment details. Hence no general guidelines can be given. The intervals given below are only suggestions from our experience.

Position	Interval	In this way
LED reflector and optical system	weekly	soft brush /lint-free cloth
Fan and air channel	monthly	vacuum cleaner, airbrush, etc.

Attention:

- Never let optical parts come into contact with oil or fat.
- Before running the fixture wait until all parts are dry.
- · Never touch lenses with bare fingers.




5.3 Changing the Fuse

Follow the safety regulations as described above!

There are two micro-fuses (2) located opposite of each other on the topside of the base. In order to attain access you first need to remove one of the two plastic side covers of the fixture arm. Open the two screws no. 1 shown in the picture below.

Replace the fuse(s) with one with the exact rating as printed in this manual or the body of the fixture. Never use a different one!

Attach the side cover again before operating the fixture.

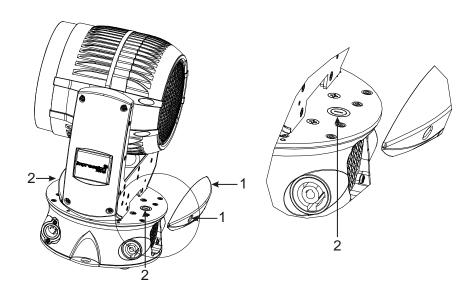





6 Technical Specifications

Power supply			
Power consumption	200 VA (Watt)		
Power Input	~100-240 V AC, 50-60 Hz (wide range input)		
Power connectors	NEUTRIK [®] powerCON		
	Power-in: NAC3FCA / NAC3MPA (blue)		
	Power-out: NAC3FCB / NAC3MPB (grey)		
Fuse protection	2x Micro-fuse 5x20 mm, T2A		
Operational Parameters			
Max. Ambient Temperature	5° - 45°C (integrated overheating switch)		
Mounting Position	Any (see relevant chapter)		
Lighting System - Additi	ve Color mixing		
LED Type	7 x Osram Ostar RGBW multi-chip		
Lifetime	50,000 h		
Wavelength optimized for	maximum presentable color space		
Optical System			
Full RGBW / High efficient	Collimator cluster		
Shutter / Dimmer (8/16 B	it)		
Strobe- Effect with variable Effects	e speed between 1 - 10 flashes per second, Random-Strobe, Pulse-		
Continuous Dimmer 0 - 100%			
Zoom			
7 to 50 degree continuous	zoom		
Optical Patterns			
Several pre-defined beam	patterns with direct access and manipulation		
DMX Control			
Standard USITT DMX-512	2, 5-pin XLR; [+] = Pin 3 / [-] = Pin 2 / [Ground] = Pin 1 / Pin 4&5 N.C.		
The DMX- Addressing sta	rts at the DMX channel [001].		
Pan / Tilt (8/16 Bit)			
Pan- movement	630° in min. 3,2 seconds (Position Feedback)		
Tilt- movement	220° in min. 1,5 seconds (Position Feedback)		
Weights and Measures			
Base only	Ø 165,5 mm		
Total width of fixture	224 mm		
Hight (head vertical)	323mm		
Weight (net)	5.5 kg		



7 Dimensions

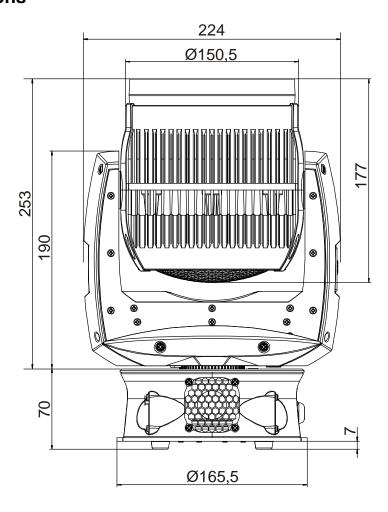

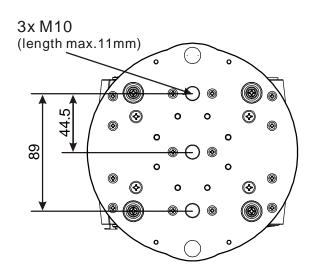

Fixture from below



8 Index

В
beam-lights6
BGV C17
C
Cleaning
Danger of BURNING .5 Description of Device .4 Dimensions .22 DIN VDE 0711-217 .7 Display Indications .18 DMX .11
E
e-mail
Н
High Resolution (Extended) -Mode17
L
LED Class 2M5
M
Maintenance19
Menu Field11
Micro-fuse
Mode- key
Mounting7 Mounting in hanging Position8
Mounting in hanging Position9
Mounting in sidewise rosidon8

N
NEUTRIK® powerCON 10
Normal-Mode14
0
Optical parts
P
Pan- Movement21
plano-convex lenses 6
Power Supply10
R
RESET 14
S
Safety distance7
Safety information 6
Safety Instructions5
Secure the Device10
Software Version1
sunlight6
T
Technical Specifications 21
Tilt- Movement
U
Up/Down-keys11
V
VBG 707
W
Warranty claims5
Weights and Measures21



